

Using Power Tools

- Wear the right clothing for the job.



CAUTION: Loose clothing or jewelry can become caught in moving parts.

- Never carry a power tool by its cord.
- Never use a damaged power tool.
- To disconnect a power tool, tug on the plug, not on the cord.
- Keep cords away from heat, oil, and sharp edges.
- Disconnect power tools:
 - ▶ When you are not using them,
 - ▶ Before servicing and cleaning them, and
 - ▶ When changing accessories such as blades, bits, and cutters.
- Secure the work with clamps or a vice, as appropriate.
- Avoid accidental starting—keep your fingers off the starting switch/button while carrying a tool that is plugged in.
- Keep power tools clean and sharp for top performance.
- Follow the user's manual for instructions about maintenance and accessories.
- Maintain a good footing and balance while operating any power tool.

